



INSTALLATION MANUAL

MODEL #201019

50A LOAD MANAGEMENT MODULE

All fleX Controller™ Models



ACTIVATE YOUR WARRANTY

by registering your product:
championpowerequipment.com

SERIAL NO.



 **1-877-338-0999**

or visit championpowerequipment.com

SAVE THESE INSTRUCTIONS. This manual contains important safety precautions which should be read and understood before operating the product. Failure to do so could result in serious injury. This manual should remain with the product.

Specifications, descriptions and illustrations in this manual are as accurate as known at the time of publication, but are subject to change without notice.

TABLE OF CONTENTS

Introduction	3
Safety Definitions	3
Important Safety Instructions	4
Safety and Dataplate Labels	6
Safety Symbols	6
Controls and Features	7
Electrical Installation Diagram	8
Installation	9
Unpacking	9
Installing the Load Management Module (LMM)	9
Connecting the LMM to the ATS	11
Setting DIP Switches	11
Settings on the flexX Controller™ Module	13
Load Teaching System	13
Maintenance	13
Specifications	14
Unit	14
Wire Gauge - Lug Rating - Torque	14
WARRANTY*	15
Warranty Qualifications	15
Repair/Replacement Warranty	15
Do Not Return The Unit To The Place Of Purchase	15
Warranty Exclusions	15
Other Exclusions	15
Limits of Implied Warranty and Consequential Damage	15
Contact Information	15

 **FOR PARTS BREAKDOWN**

Search by model number at
championpowerequipment.com

INTRODUCTION

Congratulations on your purchase of a Champion Power Equipment (CPE) product. CPE designs, builds, and supports all of our products to strict specifications and guidelines. With proper product knowledge, safe use, and regular maintenance, this product should bring years of satisfying service.

Every effort has been made to ensure the accuracy and completeness of the information in this manual at the time of publication, and we reserve the right to change, alter and/or improve the product and this document at any time without prior notice.

CPE highly values how our products are designed, manufactured, operated, and serviced as well as providing safety to the operator and those around the generator. Therefore, it is **IMPORTANT** to review this product manual and other product materials thoroughly and be fully aware and knowledgeable of the assembly, operation, dangers and maintenance of the product before use. Fully familiarize yourself, and make sure others who plan on operating the product fully familiarize themselves too, with the proper safety and operation procedures before each use. Please always exercise common sense and always err on the side of caution when operating the product to ensure no accident, property damage, or injury occurs. We want you to continue to use and be satisfied with your CPE product for years to come.

When contacting CPE about parts and/or service, you will need to supply the complete model and serial numbers of your product. Transcribe the information found on your product's nameplate label to the table below

CPE TECHNICAL SUPPORT TEAM

1-877-338-0999

MODEL NUMBER

201019

SERIAL NUMBER

DATE OF PURCHASE

PURCHASE LOCATION

SAFETY DEFINITIONS

The purpose of safety symbols is to attract your attention to possible dangers. The safety symbols, and their explanations, deserve your careful attention and understanding. The safety warnings do not by themselves eliminate any danger. The instructions or warnings they give are not substitutes for proper accident prevention measures.

DANGER

DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE indicates information considered important, but not hazard-related (e.g., messages relating to property damage).

IMPORTANT SAFETY INSTRUCTIONS

WARNING

Cancer and Reproductive Harm –
www.P65Warnings.ca.gov

DANGER

Electrical shock hazard. May cause injury or death. Disconnect all sources of supply before servicing.

WARNING

The Load Management Module (LMM) IS NOT FOR “DO-IT-YOURSELF” INSTALLATION. It must be installed by a qualified electrician thoroughly familiar with all applicable electrical and building codes.

The Load Management Module is an Power Line Carrier (PLC) controlled switch purpose-designed to provide a safe and simple method of powering a Load on and off during standby generator operation. The PLC control prevents electrical overload of standby generator by removing large loads in a controlled fashion. The LMM controls the attached load on/off using information from the flexX™ Automatic Transfer Switch via PLC.

This manual has been prepared for familiarizing servicing dealer/installer with the design, application, installation and servicing of the equipment. Read the manual carefully and comply with all instructions.

This manual or a copy of this manual should remain with the switch. Every effort has been taken to make sure that the contents of this manual are accurate and current.

The manufacturer reserves the right to change, alter or otherwise improve this literature and the product at any time without prior notice and without any obligation or liability whatsoever.

The manufacturer cannot anticipate every possible circumstance that might involve a hazard.

The warnings in this manual, tags and decals affixed to the unit are, therefore, not all-inclusive. If using a procedure, work method or operating technique the manufacturer does not specifically recommend follow all codes to ensure safety for personnel.

Many accidents are caused by failing to follow simple and fundamental rules, codes and precautions. Before installing, operating or servicing this equipment, read the SAFETY RULES carefully.

The publications that cover the safe use of ATS and installation are the following NFPA 70, NFPA 70E, UL 1008 and UL 67. It is important to refer to the latest version of any standard/code to ensure correct and current information. All installations must comply with local municipal, state and national codes.

WARNING

Unauthorized or improper installation, operation, application or repair of this equipment is extremely dangerous.

Only qualified electricians should attempt installation of this equipment, which must strictly comply with all applicable codes, standards and regulations.

When connecting a generator system to an electrical system that is normally supplied by an electric utility company, always comply with regulations of the National Electrical Code (NEC) (Article 701 Legally Required Standby Systems or Article 702 Optional Standby Systems, as applicable), and Occupational Safety and Health Administration (OSHA), as applicable. It is essential to use the latest version of any standard to ensure all current information is applied.

⚠ WARNING

Be certain that the power from the utility is turned off and all backup sources are locked out before starting this procedure. Failure to do so could result in serious injury or death. Remember, automatic start generators will start upon loss of utility mains power unless locked in the "OFF" position. Consult the generator operator manual section to locate flex™ ENGINE CONTROL module lock-out procedure.

⚠ CAUTION

Consult with your Local municipal, State and National electrical codes for proper mandatory wiring methods.

🗨 NOTICE

Improper treatment of equipment can damage it and shorten its life.

- Use equipment only for intended uses.
- Do not expose equipment to excessive moisture, dust, dirt or corrosive vapors.
- Remain alert at all times while working on this equipment. Never work on the equipment when you are physically or mentally fatigued.
- If connected devices overheat, turn them off and turn off their circuit breaker or fuse.

Safety and Dataplate Labels

These labels warn you of potential hazards that can cause serious injury. Read them carefully.

If a label comes off or becomes hard to read, contact Technical Support Team for possible replacement.

LABEL	DESCRIPTION
⚠ DANGER ⚠ PELIGRO ⚠ DANGER Electrical shock hazard. May cause injury or death. Disconnect all sources of supply before servicing. Riesgo de descarga eléctrica. Puede causar lesión o la muerte. Desconecte todas las fuentes de suministro antes de realizar el servicio. Risque d'électrocution. Peut causer des blessures ou la mort. Débranchez toutes les sources d'alimentation avant de procéder à l'entretien. To Reduce the Risk of Electric Shock – Do not connect to a circuit operating at more than 150 volts to ground. Para reducir el riesgo de descarga eléctrica – No lo conecte a un circuito que funcione a más de 150 voltios a tierra. Pour réduire le risque de choc électrique – Ne vous connectez pas à un circuit fonctionnant à plus de 150 volts à la terre.  4450 A-00-9	Danger. Electrocution shock hazard.

Safety Symbols

Some of the following symbols may be used on this product. Please study them and learn their meaning.


Proper interpretation of these symbols will allow you to more safely operate the product.

SYMBOL	MEANING
	Read Operator's Manual. To reduce the risk of injury, user must read and understand operator's manual before using this product.
	Ground. Consult with local electrician to determine grounding requirements before operation.
	Electric Shock. Improper connections can create an electrocution hazard.
	

CONTROLS AND FEATURES


Read this installation manual before installing your fleX™ Load Management Module (LMM). Familiarize yourself with the location and function of the controls and features. Save this manual for future reference.

The fleX™ LMM turns power on and off to the load by using a Power Line Carrier (PLC) signal. The LMM receives a signal over PLC from the fleX™ Automatic Transfer Switch (ATS). The ATS analyzes the load (Amps) via 2 current transformers across L1 and L2 in the ATS and calculates whether LMM management is required. Load priority is determined by the ATS DIP switch settings. The LMM is capable of controlling resistive loads up to 50 Amps when wired into the load circuit. The load should be derated per NEC code for the accompanying circuit breaker used on the load circuit.

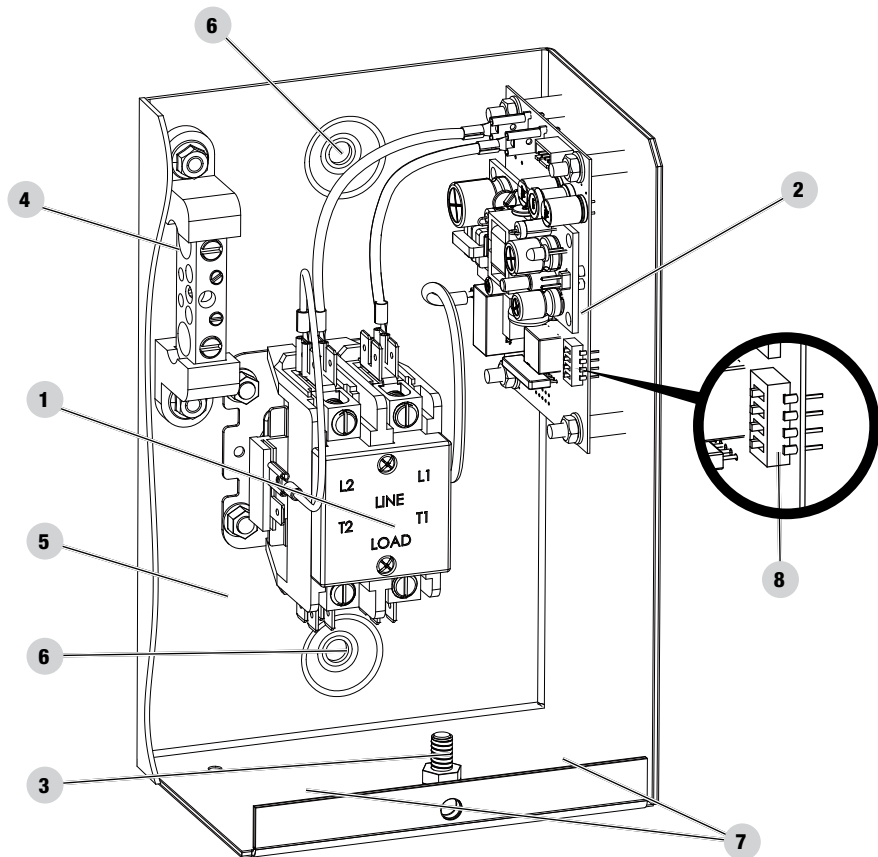

- | | |
|---|---|
| 1. Contactor | 5. NEMA 3R Aluminum Enclosure |
| 2. Control Board | 6. Mounting Locations (2) |
| 3. Ground Lug | 7. Recommended wiring locations.
Not pre-drilled. |
| 4. Neutral Bar – not used, but available for 120V requirements. | 8. DIP Switches – used to set priority and bond mode. |

Electrical Installation Diagram

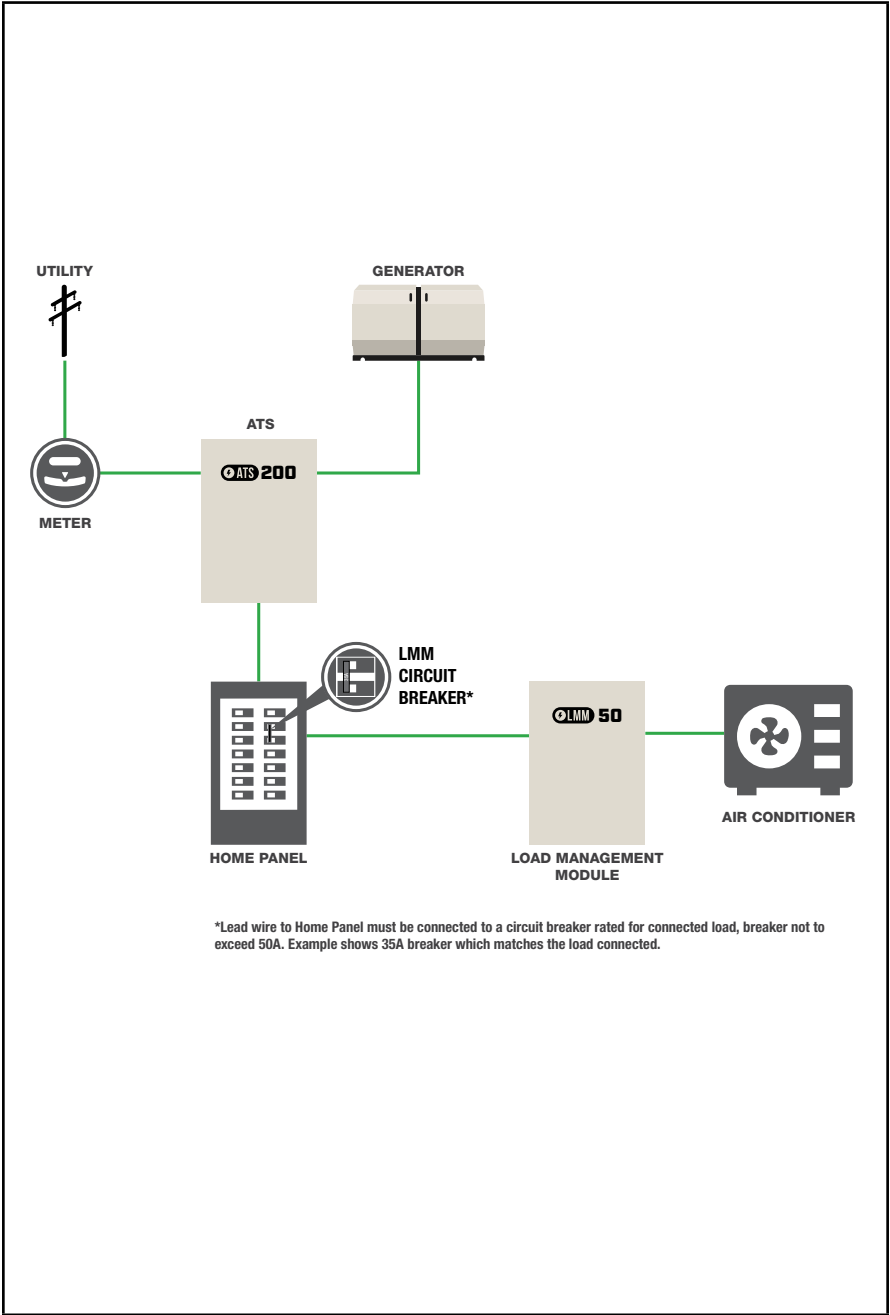

INSTALLATION

Unpacking

Carefully unpack the LMM. Inspect closely for any damage that might have occurred during shipment. Check that all packing material is completely removed from the LMM prior to installation. Handle LMM carefully when installing. Do not drop. Always protect the LMM against impacts and against construction grit and metal chips. Never install an LMM that is damaged.

Tools Required	Not Included
3/16 in. Flat Screwdriver	Mounting Hardware
P2 Phillips Screwdriver	Line Voltage Wire
1/4" Blade Screwdriver	Conduit
Pliers	Fittings
Wire stripper	Twist on wire connectors – as needed


Installing the Load Management Module (LMM)

The enclosure is NEMA type 3R rated and is suitable for indoor/outdoor installations.

General guidelines:


- Mount to a surface that can support the 2.3 lb. (1050 g) weight of the module that adheres to all local codes.
- The enclosure must be installed with NEMA type 3R hardware and connections when mounted outdoors.
- Level and plumb the module enclosure to prevent deformation.
- Never install the module where any corrosive substance may come in contact with the enclosure.
- Protect the module at all times against excessive moisture, dust, dirt, lint, construction grit and corrosive vapors.

1. Remove the cover.

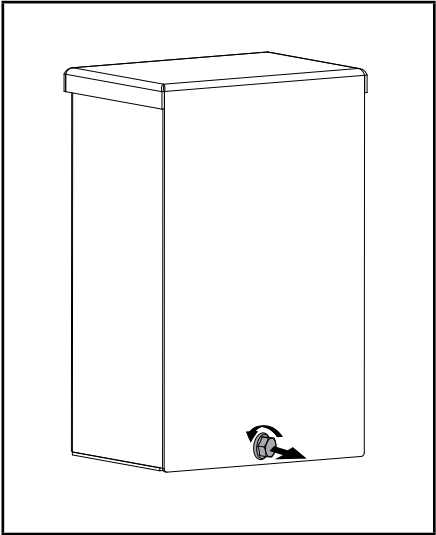


2. Break the lead wires to the load using code compliant wire. Lead wire from Home Panel must be wired to a circuit breaker rated for connected Load, breaker not to exceed 50A.


3. Connect the L1 and L2 Line to the top of the contactor relay (LINE connections).

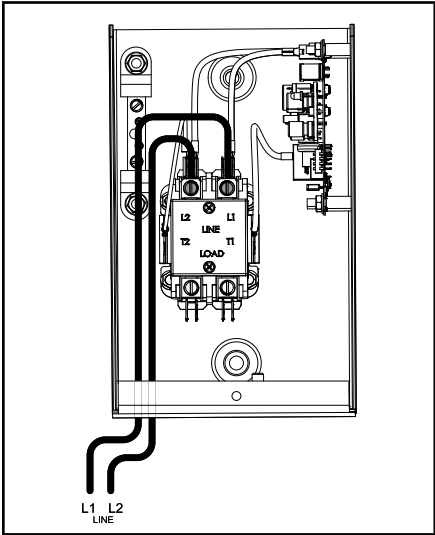


4. Connect the T1 and T2 lines to the bottom of the contactor relay (LOAD connections).

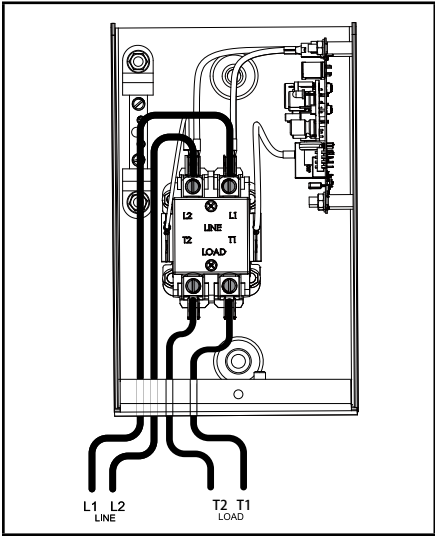


5. Connect the ground to the ground terminal.

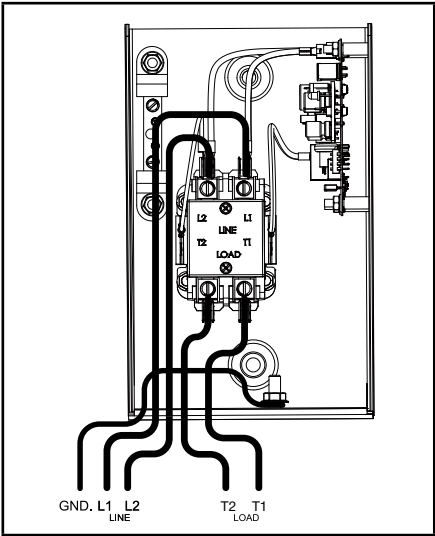

6. Max. Torque Line, Load Terminals and Ground Terminal to 25 in. lbs. (2.8 N-m).

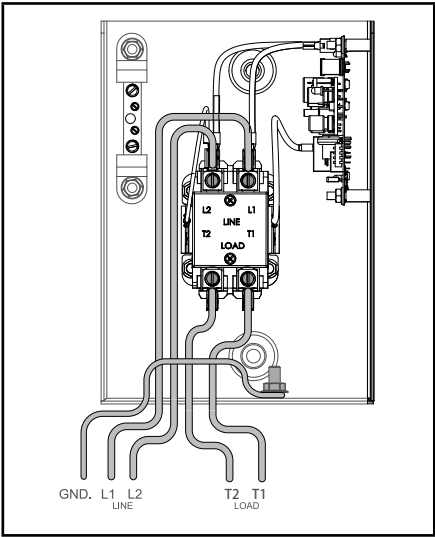


7. Replace the cover.

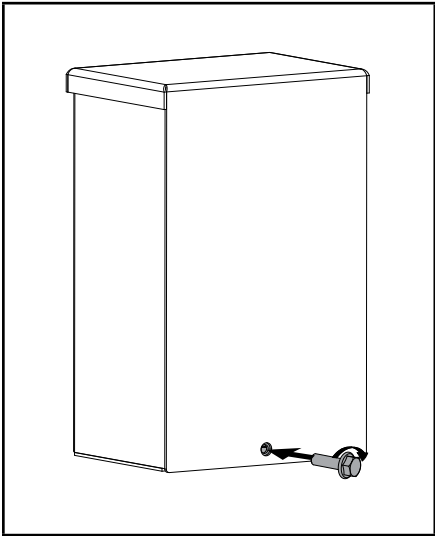

Setting DIP Switches

The DIP Switches set parameters of the controller. There are 4 DIP switches on the LMM. These are the designated “ON” or “OFF” position settings for the DIP switches;

DIP Switches 1-2 are used to communicate with the ATS and create a hierarchy. **DIP Switches 3-4** are used to set BOND MODE.

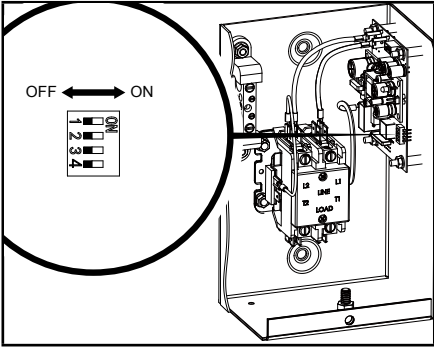

Connecting the LMM to the ATS

⚠ DANGER

Electrical shock hazard. May cause injury or death. Disconnect all sources of supply before servicing.

🗨 NOTICE


The control loads will be shut off one at a time starting with the lowest priority until Power Management determines the generator can handle the house load. If a controlled load is being turned off before a lower priority load, rearrange the order of the loads until satisfactory performance is achieve.

LMM DIP Switches 1-2 – used to set priority			ATS DIP Switch
1	2	Priority	
OFF	OFF	Lowest	1
OFF	ON	Lower	2
ON	OFF	Higher	3
ON	ON	Highest	4

LMM DIP Switches 3-4 – used to set BOND MODE		
3	4	
OFF	OFF	Not Used
OFF	ON	
ON	OFF	
ON	ON	Enter Bond Mode

ATS DIP Switches 1-4 on the fleX ATS control lockout of the LMM during generator operation.

Set to OFF if the desired load should not function during generator operation. Set to ON the attached load will be controlled by the LMM.

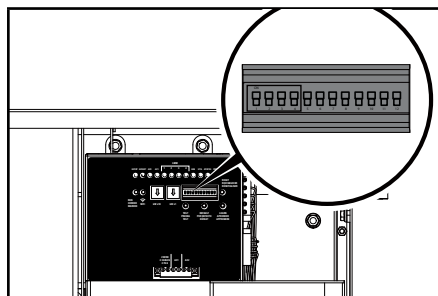

The LMM supports a maximum of four (4) priorities. The following scenarios describe priority setting examples for a different number of LMMs.

4 or less LMMs

When there are four (4) or fewer LMMs, each of the four priorities can be allocated to a separate LMM, enabling only one LMM to be activated or deactivated at a time during load adjustments.

LMM DIP Switch			LMM
1	2	Priority	
OFF	OFF	Lowest	1
OFF	ON	Lower	2
ON	OFF	Higher	3
ON	ON	Highest	4

5 or more LMMs

When the total number of LMMs surpasses four (4), it becomes possible for multiple LMMs to share the same priority level. This will lead to their simultaneous activation or deactivation.

For instance, with a total of six (6) LMMs available, LMMs 1 through 4 could be assigned priorities ranging from Lowest to Highest. LMM5 would receive a Lower priority, while LMM6 is given a Higher priority. In this arrangement, both LMM2 and LMM5 share the same priority, as do LMM3 and LMM6. Once the ATS is operational and the LMMs

are activated, LMM2 and LMM5 will have the same priority, and LMM3 and LMM6 will have the same priority. If the system experiences an overload, LMM2 and LMM5 will be deactivated with the same priority, and LMM3 and LMM6 will be deactivated with the same priority. LMM4 remains the highest priority.

LMM DIP Switch			LMM
1	2	Priority	
OFF	OFF	Lowest	1
OFF	ON	Lower	2
ON	OFF	Higher	3
ON	ON	Highest	4
OFF	ON	Lower	5
ON	OFF	Higher	6

LMM DIP Switches 3-4

BOND MODE

See BOND MODE in the ATS manual, and familiarize yourself with the ATS manual first.

After the LMM is powered on, DIP switches 3-4 must be simultaneously moved to the OFF position to initialize the BOND MODE. Then, move the DIP switches 3-4 simultaneously to the ON position to enter the BOND MODE.

After installing the HSB, ATS, and LMM, if LMM DIP switches 3-4 are in the OFF position, move them to the ON at the same time to enter the BOND MODE; DIP switches 3-4 can start in the OFF position or if DIP switches 3-4 are in the ON position, move them to the OFF position, wait 1 second, and then switch ON at the same to enter the BOND MODE.

After bonding is complete, the LMM automatically exits the BOND MODE regardless of the position status of switches 3-4. However, before entering the BOND MODE the next time if needed, move switches 3-4 to the ON position, move them to the OFF position, wait 1 second, and then switch ON at the same to enter the BOND MODE.


If any system components change, you must run through BOND MODE again.

Settings on the fleX Controller™ Module

On the ATS fleX Controller, set the two circular pots that are located to the left of the DIP switches to match the maximum power output of the generator for your fuel type.

1st pot (left pot) is 10's value, 2nd pot (right pot) is 1's value, do not go over generator rating. If wattage rating of generator falls between settings choose the next lower value; e.g. generator rating is 22,00W, set pots to 2 and 2 or if wattage is not even 1000, set to the smaller value, e.g 12,500W, set pots to 1 and 2.

See fleX Controller™ ATS Installation Manual for more information.

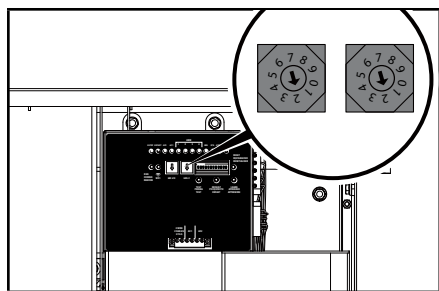


LOAD TEACHING SYSTEM

After installation and wiring are complete teach the ATS which loads are attached by the following procedure.

1. Turn Champion fleX™ ATS UTILITY circuit breaker to the "OFF" position. Generator will start and run automatically if the fleX Controller™ is in AUTO.
2. Confirm managed loads are all operating.
3. Press and hold the button marked "LEARN" for 8 seconds. The ATS will turn off all loads, and then turn on one load at a time until all loads are turned on. Then, the ATS will shutoff all managed loads one at a time until all are OFF. The ATS will flash LEDs indicating function in process. LMM1-LMM4 LEDs are separated by about 15 seconds.

4. After the ATS has learned all loads the LMM units will be returned to normal operation.
5. Installation configuration is now held in memory and will not be affected by power outage.
6. Return UTILITY circuit breaker to the "ON" position. ATS will transfer load back to utility and generator will cool down and shut off.
7. Put the fleX Controller™ to AUTO.
8. Repeat this process if LMM units are added or removed from the system.

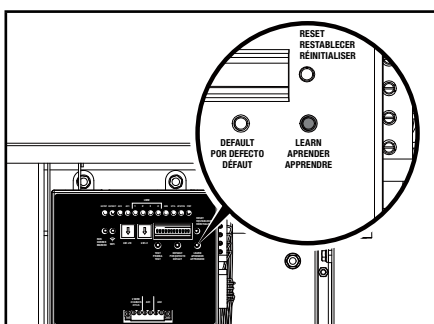

MAINTENANCE

The LMM is designed to be maintenance free under normal use. However, inspection and maintenance checks should be made on a regular basis. Maintenance will consist mainly of keeping the module clean. Visual inspection should be done at least once a month. Access to the module must not be obstructed, follow NEC or local code requirements for clearance around a distribution box. Check for an accumulation of dirt, moisture and/ or corrosion on and around the enclosure, loose parts/hardware cracks and/or discoloration to insulation, and damaged or discolored components.

Exercise the module as part of the transfer switch test at least once every three months Functional Testing unless a power outage occurs, and the home generator has gone through an automatic sequence.

SPECIFICATIONS

Unit

Model	201019
Service rating	Energy Management Equipment
Enclosure type	Type 3R Outdoor*
Maximum Amps	50A resistive
Nominal Volts	120/240
ETL Listed - Conforms to	CAN/CSA Standard C22.2 No. 205 UL916 Energy Management Equipment
Load Management Circuits	1
Length	8.3 in. (21 cm)
Width	5.3 in. (13.5 cm)
Height	3.9 in. (10 cm)
Weight	2.2 lbs (1.0 kg)
LMM is triggered by current measurement by the Automatic Transfer Switch (ATS).	
Load bars in the ATS container current transformers on L1 and L2 that send current information to flexX™ ATS controller to determine if LMM management is required.	
Use 75°C Cu Wire	

Wire Gauge - Lug Rating - Torque

	Load	Neutral	Ground
Gauge (AWG)	4 gauge maximum	min 14 – max 4	per code
Lug Rating	6 gauge max. 75°C Cu wire	4-14 AL9CU	per code
Torque (lbf-in/Nm)	25lbf-in	25lbf-in	25lbf-in

* TYPE 3R – This type of enclosed LMM is a weatherproof enclosure required by code for exterior installations. The enclosure has wire entry/exit provisions on the bottom, and requires water tight connections when installed outside per code. This enclosure can also be used inside.

WARRANTY*

CHAMPION POWER EQUIPMENT

2 YEAR LIMITED WARRANTY

Warranty Qualifications

To register your product for warranty and FREE lifetime call center technical support please visit:

<https://www.championpowerequipment.com/register>

To complete registration you will need to include a copy of the purchase receipt as proof of original purchase. Proof of purchase is required for warranty service. Please register within ten (10) days from date of purchase.

Repair/Replacement Warranty

CPE warrants to the original purchaser that the mechanical and electrical components will be free of defects in material and workmanship for a period of two years (parts and labor) from the original date of purchase and 180 days (parts and labor) for commercial and industrial use. Transportation charges on product submitted for repair or replacement under this warranty are the sole responsibility of the purchaser. This warranty only applies to the original purchaser and is not transferable.

Do Not Return The Unit To The Place Of Purchase

Contact CPE's Technical Service and CPE will troubleshoot any issue via phone or e-mail. If the problem is not corrected by this method, CPE will, at its option, authorize evaluation, repair or replacement of the defective part or component at a CPE Service Center. CPE will provide you with a case number for warranty service. Please keep it for future reference. Repairs or replacements without prior authorization, or at an unauthorized repair facility, will not be covered by this warranty.

Warranty Exclusions

This warranty does not cover the following repairs and equipment:

Normal Wear

Products with mechanical and electrical components need periodic parts and service to perform well. This warranty does not cover repair when normal use has exhausted the life of a part or the equipment as a whole.

Installation, Use and Maintenance

This warranty will not apply to parts and/or labor if the product is deemed to have been misused, neglected, involved in an accident, abused, loaded beyond the product's limits, modified, installed improperly or connected incorrectly to any electrical component.

Normal maintenance is not covered by this warranty and is not required to be performed at a facility or by a person authorized by CPE.

Other Exclusions

This warranty excludes:

- Cosmetic defects such as paint, decals, etc.
- Wear items such as filter elements, o-rings, etc.
- Accessory parts such as storage covers.
- Failures due to acts of God and other force majeure events beyond the manufacturer's control.
- Problems caused by parts that are not original Champion Power Equipment parts.

Limits of Implied Warranty and Consequential Damage

Champion Power Equipment disclaims any obligation to cover any loss of time, use of this product, freight, or any incidental or consequential claim by anyone from using this product. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

A unit provided as an exchange will be subject to the warranty of the original unit. The length of the warranty governing the exchanged unit will remain calculated by reference to the purchase date of the original unit.

This warranty gives you certain legal rights which may change from state to state or province to province. Your state or province may also have other rights you may be entitled to that are not listed within this warranty.

Contact Information

Address

Champion Power Equipment, Inc.
6370 S Pioneer Way, Unit 101
Las Vegas, NV 89113 USA
www.championpowerequipment.com

Customer Service

Toll Free: 1-877-338-0999
info@championpowerequipment.com
Fax no.: 1-562-236-9429

Technical Service

Toll Free: 1-877-338-0999
tech@championpowerequipment.com
📞 Emergency 24 Hour Support: 1-562-204-1188